

INSTALLATION

Tools Required:

Flat Screwdriver
Super glue (optional)


Time to install: 1-2 minutes

Step One – Verify all materials are included.

Be sure your purchase contains the materials you've requested. This should include the key cap itself, the hinge mechanism and a rubber cup (optional) which will be under the key when install is finished.



Step Two – Separate hinge mechanism from key cap and begin installation.

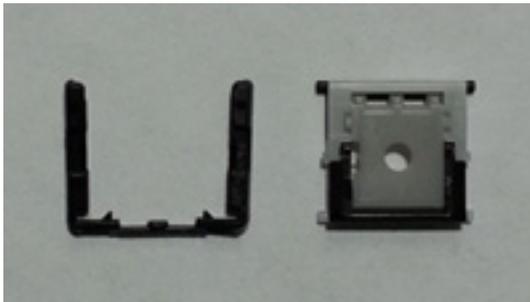

Hinges are pre-attached to each key for protection during shipping and must be removed to install. Take note of the orientation of the hinge mechanism to help you with placement.

NOTE: Please use caution when separating the pieces, as they are very fragile! This hinge mechanism must be installed in two steps.



If the rubber cup is missing, it must be installed first!

Apply a small amount of glue around the OUTER rim of the cup and seat it in the center of the hinge assembly. Sometimes the rubber cup will firmly sit in place by itself, but it is better to use adhesive.

Allow ample drying time before proceeding.

Step Three – Complete hinge mechanism install.

The first component to be installed is the U shaped piece. Simply align the notches on the U shaped component under the brackets on the keyboard. This will hold the first piece in place. Proceed to install the black/white or black/grey component by simply pushing the small tabs into their respective notches on the U shaped piece installed before. In most cases, the finished hinge should look like the picture below.

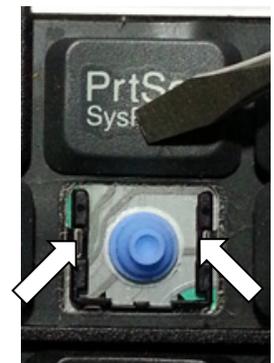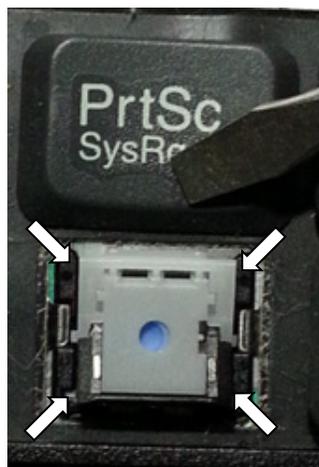

Step Four – Press key cap into place and complete install.

Once you've finished installing the hinge, simply align the key cap on top of the hinge mechanism and press down. If the key cap clicks into place, you're all done!

Congratulations on successfully completing your quick fix!



Ulfix Laptop Keyboard Keys